

# PULSAFEEDER®

The Pulsatron Series A Plus offers manual function controls over stroke length and stroke rate as standard with the option to select external pace for automatic control.

Ten distinct models are available, having pressure capabilities to 250 PSIG (17 BAR) @ 12 GPD (1.9 lph), and flow capacities to 58 GPD (9.1 lph) @ 100 PSIG (7.0 BAR), with a standard turndown ratio of 100:1, and optional ratio of 1000:1. Metering performance is reproducible to within  $\pm 3\%$  of maximum capacity.

## Features

- Manual Control by on-line adjustable stroke rate and stroke length.
- Highly Reliable timing circuit.
- Circuit Protection against voltage and current upsets.
- Solenoid Protection by thermal overload with auto-reset.
- Water Resistant, for outdoor and indoor applications.
- Internally Dampened To Reduce Noise.
- Guided Ball Check Valve Systems, to reduce back flow and enhance outstanding priming characteristics.
- Few Moving Parts and Wall Mountable.
- Safe & Easy Priming with durable leak-free bleed valve assembly (standard).
- Optional Control: External pace with auto/manual selection.

## Controls



**Manual Stroke Rate**

**Manual Stroke Length**

**External Pacing - Optional**

**External Pace With Stop - Optional (125 SPM only)**

Controls Options		
Feature	Standard Configuration	Optional Configuration <sup>1</sup>
External Pacing	---	Auto / Manual Selection <sup>2</sup>
External Pace w/ Stop (125 SPM only)	---	Auto / Manual Selection <sup>2</sup>
Manual Stroke Rate	10:1 Ratio	100:1 Ratio
Manual Stroke Length	10:1 Ratio	10:1 Ratio
Total Turndown Ratio	100:1 Ratio	1000:1 Ratio

Note 1: On S2, S3 & S4 sizes only.

Note 2: Not available on 1000:1 turndown pumps.

## Operating Benefits

- Reliable metering performance.
- Rated "hot" for continuous duty.
- High viscosity capability.
- Leak-free, sealless, liquid end.



## Aftermarket

- KOPkits
- Gauges
- Dampeners
- Pressure Relief Valves
- Tanks
- Pre-Engineered Systems
- Process Controllers (MicroVision)



**PULSAtron® Series A Plus**  
**Electronic Metering Pumps**

# PULSAtron® Series A Plus

## Specifications and Model Selection

MODEL		LBC2	LB02	LBC3	LB03	LB04	LB64	LBC4	LBS2	LBS3	LBS4	
Capacity nominal (max.)	GPH	0.25	0.25	0.42	0.50	1.00	1.25	2.00	0.50	1.38	2.42	
	GPD	6	6	10	12	24	30	48	12	33	58	
	LPH	0.9	0.9	1.6	1.9	3.8	4.7	7.6	1.9	5.2	9.14	
Pressure <sup>3</sup> (max.)	GFPP, PVDF, 316SS or PVC (W code) w/TFE Seats	PSIG (Bar)	250 (17)	150 (10)	250 (17)	150 (10)	100 (7)	100 (7)	50 (3.3)	250 (17)	150 (10)	100 (7)
	PVC (V code) Viton or CSPE Seats / Degas Liquid End		150 (10)									
Connections:	Tubing	1/4" ID X 3/8" OD						3/8" ID X 1/2" OD		1/4" ID X 3/8" OD		
	Piping	1/4" FNPT										
Strokes/Minute	SPM	125								250		

Note 3: Pumps with rated pressure above 150 PSI will be de-rated to 150 PSI Max. when selecting certain valve options, see Price Book for details.

### Engineering Data

<b>Pump Head Materials Available:</b>	GFPPPL PVC PVDF 316 SS
<b>Diaphragm:</b>	PTFE-faced CSPE-backed
<b>Check Valves Materials Available:</b>	
<b>Seats/O-Rings:</b>	PTFE CSPE Viton
<b>Balls:</b>	Ceramic PTFE 316 SS Alloy C
<b>Fittings Materials Available:</b>	GFPPPL PVC PVDF
<b>Bleed Valve:</b>	Same as fitting and check valve selected, except 316SS
<b>Injection Valve &amp; Foot Valve Assy:</b>	Same as fitting and check valve selected
<b>Tubing:</b>	Clear PVC White PE

Important: Material Code - GFPPPL=Glass-filled Polypropylene, PVC=Polyvinyl Chloride, PE=Polyethylene, PVDF=Polyvinylidene Fluoride, CSPE=Generic formulation of Hypalon, a registered trademark of E.I. DuPont Company. Viton is a registered trademark of E.I. DuPont Company. PVC wetted end recommended for sodium hypochlorite.

### Dimensions

Series A PLUS Dimensions (inches)						
Model No.	A	B	C	D	E	Shipping Weight
LB02 / S2	5.0	9.6	9.5	6.5	8.2	10
LBC2	5.0	9.9	9.5	6.5	8.5	10
LBC3	5.0	9.9	9.5	6.5	8.5	10
LB03 / S3	5.0	9.9	9.5	6.5	8.5	10
LB04 / S4	5.0	9.9	9.5	6.5	8.5	10
LB64	5.0	9.9	9.5	6.5	8.5	10
LBC4	5.0	9.9	9.5	6.5	8.5	10

NOTE: Inches X 2.54 = cm

### Engineering Data


<b>Reproducibility:</b>	+/- 3% at maximum capacity
<b>Viscosity Max CPS:</b>	1000 CPS
<b>Stroke Frequency Max SPM:</b>	125 / 250 by Model
<b>Stroke Frequency Turn-Down Ratio:</b>	10:1 / 100:1 by Model
<b>Stroke Length Turn-Down Ratio:</b>	10:1
<b>Power Input:</b>	115 VAC/50-60 HZ/1 ph 230 VAC/50-60 HZ/1 ph
<b>Average Current Draw:</b>	
<b>@ 115 VAC; Amps:</b>	0.6 Amps
<b>@ 230 VAC; Amps:</b>	0.3 Amps
<b>Peak Input Power:</b>	130 Watts
<b>Average Input Power @ Max SPM:</b>	50 Watts

### Custom Engineered Designs – Pre-Engineered Systems



#### Pre-Engineered Systems

Pulsafeeder's Pre-Engineered Systems are designed to provide complete chemical feed solutions for all electronic metering applications. From stand alone simplex pH control applications to full-featured, redundant sodium hypochlorite disinfection metering, these rugged fabricated assemblies offer turn-key simplicity and industrial-grade durability. The UV-stabilized, high-grade HDPE frame offers maximum chemical compatibility and structural rigidity. Each system is factory assembled and hydrostatically tested prior to shipment.

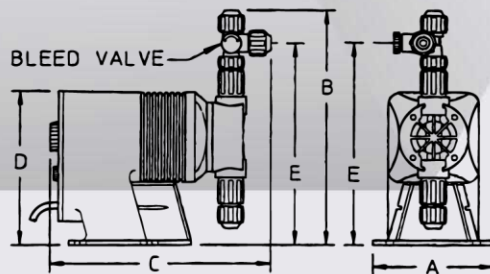

27101 Airport Road  
Punta Gorda, FL 33982  
Phone: ++1(941) 575-3800  
Fax: ++1(941) 575-4085

www.pulsatron.com



An ISO 9001 Certified Company

EMP025 B15

